### 200380600D\_Lyve Mobile Mount\_90mmX130mm\_EN\_QSG

Part Number: 200380600D
Folded Size: 90 mm W x 130 mm H
Trim Size: mm 720 mm W X 130 mm H

Colors: K/K

K

# Lyve<sup>™</sup> Management Portal credentials

A Lyve Management Portal username and password are required to authorize computers to access devices connected to the PCle® Adapter.

### Account manager

You created a Lyve Management Portal username and password when you set up your Lyve account at **lyve.seagate.com**.

### Product admin or product user

You were identified as a product user for a project created in the Lyve Management Portal. An email was sent to you from the Lyve team that included a link for resetting your password.

If you can't remember your credentials or you lost your email invitation, visit lyve.seagate.com. Click Sign in and then click the Don't remember your password? link. If your email isn't recognized, contact your account manager. For further help, you can contact customer support using the Lyve Virtual Assist Chat.

## **Download Lyve Client**

To unlock and access Lyve devices connected to your computer, you must enter your username and password in the Lyve Client app. You can also use it to manage Lyve projects and data operations. Install Lyve Client on any computer intended to connect to Lyve Mobile PCle Adapter. Download the Lyve Client installer for Windows® or macOS® at www.seagate.com/support/lyve-client.

## **Authorize host computers**

An internet connection is required when authorizing a host computer.

- Open Lyve Client on a computer intended to host Lyve Mobile Array.
- 2. When prompted, enter your Lyve Management Portal username and password.

Lyve Client authorizes the host computer to unlock and access Lyve devices and manage projects on the Lyve Management Portal.

The host computer remains authorized for up to 30 days, during which you can unlock and access connected devices even without an internet connection. After 30 days, you'll need to open Lyve Client on the computer and re-enter your credentials.


Lyve Mobile Array locks when powered off, ejected or unplugged from the host computer, or if the host computer goes to sleep. Use Lyve Client to unlock Lyve Mobile Array when it is reconnected to the host or the host has awakened from sleep. Note that Lyve Client must be open and the user must be signed in to use Lyve Mobile Array.




www.seagate.com/support/pcie-adapter

## Mounting slots

Before installing Lyve Mobile PCIe Adapter, ensure that Lyve Mobile Mount is securely fixed to a vehicle, apparatus, or structure to avoid excessive motion.

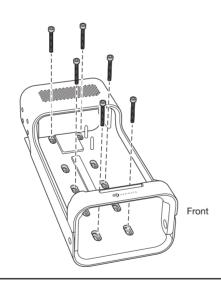

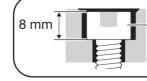


To avoid damaging Lyve
Mobile Array's enclosure,
the cylindrical socket cap
on the mounting screws
cannot exceed 8mm
in height.



## -


Slide Lyve Mobile PCle Adapter onto the guide pins at the back of Lyve Mobile Mount.

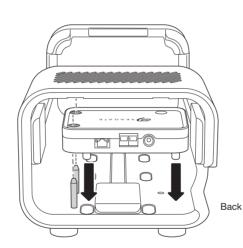

## 2 Attach shoulder screw


Lyve Mobile Mount + PCle Adapter QSG

Insert the shoulder screw into the hole and tighten it.

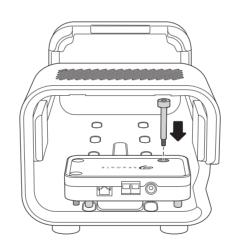



# 3 Connect power

- A Snap the locking bracket onto the power cable.
- **B** Insert the power cable into the PCle Adapter's power port.

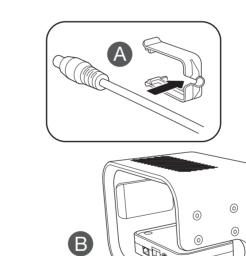

- **C** Confirm that the power cable is well connected.
- D Slide the locking bracket forward and clip it on the beveled rim on PCIe Adapter.

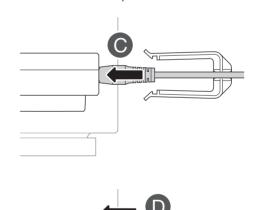


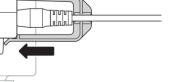



Connect the cables to PCIe Adapter:

- Ethernet\*: Device configuration
- SFF-8644: Data

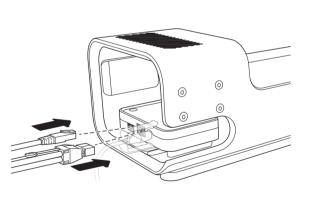


\* Ethernet cable not included.

## 200380600D Lyve Mobile Mount 90mmX130mm EN QSG

Part Number: 200380600D Folded Size: 90 mm W x 130 mm H Trim Size: mm 720 mm W X 130 mm H


Colors: K/K

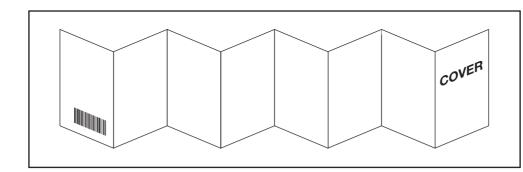


## Lyve Mobile Mount + PCle Adapter QSG

# 5 Release handle

Press the green release button and pull the handle down.

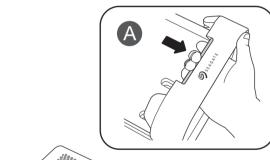


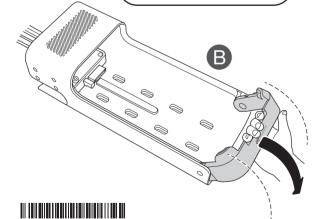



Insert the device with ports facing PCIe Adapter. Slide the device toward the back of the mount. Apply firm pressure until the device is seated on Mobile Mount and firmly connected to the PCIe connector.


### Recommended clearance zones

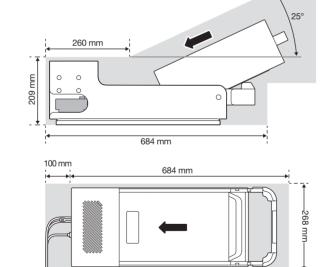




## 7 Lock device in place

Raise the handle and lock it in place.

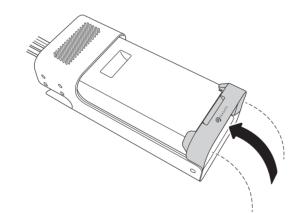

The LED on the device inserted in Lyve Mobile Mount blinks white during the boot process and turns solid orange. The solid orange LED color indicates the device is ready to be unlocked.

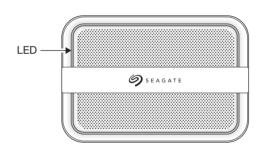

Make sure the Lyve Client app is running on the host computer. The host computer will automatically unlock the device if it connected to it in the past and is still authorized for security. If the host computer has never unlocked the device, you will need to enter your Lyve Management Portal username and password in the Lyve Client app.

Once Lyve Client has validated permissions for the device connected to the computer, the LED on the device turns solid green. The device is unlocked and ready for use.

## Safely removing a device 8 Unlock the drive


Your computer must perform filing and housekeeping operations on your Lyve device before it is physically removed from Lyve Mobile Mount. To avoid corrupting or damaging files, always eject the device's volumes from your computer before physically removing the device.

> To avoid muscle strain or back injury, use proper lifting techniques when removing devices from Lyve Mobile Mount.



www.seagate.com/manuals/mobile-mount-pcie

### China RoHS 2 table

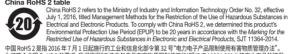

	有害物质	质			Hazardo	ous Substances
部件名称 Part Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr+®)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外接硬盘印刷电路板 Bridge PCBA	х	0	0	0	0	0
电源 (如果提供) Power Supply (if provided)	х	0	0	0	0	0
接口电缆 (如果提供) Interface cable (if provided)	х	0	0	0	0	0
其他外壳组件 Other enclosure components	0	0	0	0	0	0
★事故依据 S I/T 1136/ 的初空绘制						

Taiwan RoHS table
Taiwan RoHS refers to the Taiwan Bureau of Standards, Metrology and Inspection's (BSMI's) requirements in standard CNS 15663, Guidance to reduction of the restricted chemical substances in electrical and electronic equipment. Beginning on January 1, 2018, Seagate products must comply with the "Marking of presence" requirements in Section 5 of CNS 15663. This product is Taiwan RoHS compliant.

台灣 RoHS 是指台灣標準局計量檢驗局 (BSMI) 對標準 CNS 15663 要求的減排電子電氣設備限用化學物質指引。 從2018年1月1日起,Seagate 產品必須符合 CNS 15663 第 5 節「含有標示」要求。本產品符合台灣 RoHS。

產品名稱:磁碟陣列功能擴充座,型號:SMDG001		Product Name: Lyve Mobile PCle Adapter, Model: SMDG					
	限用物質及其化學符號			Restricted Substance and its chemical symbol			
單元 Unit	鉛 (Pb)	汞 (Hg)	編 (Cd)	六價路 (Cr+f)	多溴聯苯 (PBB)	多溴二苯 (PBDE)	
外接硬盤印刷電路板 Bridge PCBA	-	0	0	0	0	0	
電源 (如果提供) Power Supply (if provided)	-	0	0	0	0	0	
傳輸線材 (如果提供) Interface cable (if provided)	-	0	0	0	0	0	
其他外殼組件 Other enclosure components	0	0	0	0	0	0	
備考 1. "O" 係指該項限用物質之百分比含量未超出百 Note 1. "O" indicates that the percentage content of the			oes not exce	eed the percenta	ge of reference va	alue of presen	

中国 ROHS 2 是指 2016 年7月1 日起施行的工业和信息化部令第32 号"电力电子产品限制使用有害物质管理办法"。 为了符合中国 RoHS 2 的要求,我们根据"电子电气产品有害物质限制使用标识"(SJT 11364-2014)确定本产品的环保使用期 (EPUP)为20 年。

	有害物质				Hazardous Substances		
B件名称 art Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
接硬盘印刷电路板 idge PCBA	х	0	0	0	0	0	
源(如果提供) wer Supply (if provided)	х	0	0	0	0	0	
口电缆 (如果提供) terface cable (if provided)	х	0	0	0	0	0	
他外壳组件 her enclosure components	0	0	0	0	0	0	

O:表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下

X: Indicates that the hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T26572.

The following table meets the Section 5 "Marking of presence" requirements.

## S E A G A T E

communications.



and/or PCIExpress design mark are registered trademarks and/or service marks of PCI-SIG. All other trademarks or registered trademarks are the property of their respective owners. Complying with all applicable copyright laws is the responsibility of the user. Seagate reserves the right to change, without notice, product offerings or specifications. Seagate Technology LLC., 47488 Kato Road, Fremont, CA 94538 USA www.seagate.com Seagate Technology NL B.V., Tupolevlaan 105, 1119 PA Schiphol-Rijk NL Seagate Technology NL B.V. (UK Branch), Jubilee House, Globe Park, 3rd Ave, Marlow SL7 1EY, UK Seagate Singapore International Headquarters Pte. Ltd., 90 Woodlands Avenue 7 Singapore 737911

FCC DECLARATION OF CONFORMANCE However, there is no guarantee that

(2) this device must accept any interference turning the equipment

the FCC Rules. Operation is subject to

This equipment has been tested and

found to comply with the limits for a

Class B digital device pursuant to Part

15 of the FCC Rules. These limits are

designed to provide reasonable protection

against harmful interference in residential

installation. This equipment generates, uses, and can radiate radio frequency

energy and, if not installed and used in

accordance with the instructions, may

cause harmful interference to radio

cause undesired operation.

This device complies with Part 15 of interference will not occur in a particular

the following two conditions: (1) this device harmful interference to radio or television may not cause harmful interference, and reception, which can be determined by

この装置は、クラスB機器です。この装置は、住宅環境で使用することを目的

としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。 VCCI一B

received, including interference that may off and on, the user is encouraged to

installation. If this equipment does cause

try to correct the interference by one

or more of the following measures:

Reorient or relocate the receiving

Increase the separation between the

· Connect the equipment into an outlet

on a circuit different from that to which

**CAUTION:** Any changes or modifications

user's authority to operate this equipment.

made to this equipment may void the

equipment and receiver.

the receiver is connected.

radio/TV technician for help.







QUICK START GUIDE